

Firewall Entry Level



**Manuale utente
User manual**

Ver.: 1.0PF072013

AFEL Family



Specifiche tecniche / Technical specifications

- CPU: Geode 500 MHz
- RAM: 256MB
- USB: 2 USB 2.0 port
- SERIAL: 1 Serial port (9600 Baud, 8bit, 1 stop bit, parity none)
- WiFi: Complex WLM54AG, 802.11 a/b/g 23dBm @ 2.4/5GHz (200mW) (optional)
- 3G: 3G HSPA module, GSM/UMTS 800/850/1900/2100 (optional)

| <i>Modello/Model</i> | <i>CF</i> | <i>NIC</i> | <i>WiFi</i> | <i>3G</i> | <i>Colore/Color</i> |
|----------------------|-----------|------------|-------------|-----------|---------------------|
| AFEL2R512-12 | 512 | 2 | - | - | rosso/red |
| AFEL3R2-11 | 2048 | 3 | - | - | rosso/red |
| AFEL3B2-11 | 2048 | 3 | - | - | nero/black |
| AFEL3R4-11 | 4096 | 3 | - | - | rosso/red |
| AFEL3B4-11 | 4096 | 3 | - | - | nero/black |
| AFEL3R4W-11 | 4096 | 3 | 1 | - | rosso/red |
| AFEL3B4W-11 | 4096 | 3 | 1 | - | nero/black |
| AFEL2R4SIM-13 | 4096 | 2 | - | 1 | rosso/red |
| AFEL11G4W-13 | 4096 | 1 | 1 | - | grigio/gray |
| AFEL12G4W-13 | 4096 | 1 | 2 | - | grigio/gray |

Prima configurazione del firewall

- assegnare al proprio PC l'indirizzo IP 192.168.1.2/24 o lasciare l'interfaccia in DHCP
- collegarsi tramite cavo di rete alla prima NIC a destra, vicina alla porta USB
- collegare l'alimentazione al dispositivo
- accedere tramite browser alla seguente pagina per il wizard di configurazione:
https://192.168.1.1/wizard.php?xml=setup_wizard.xml
- Oppure direttamente alla console:
<https://192.168.1.1/>

Dati di accesso:

- Username: admin
- Password: pfsense

English

First firewall configuration

- set the IP address 192.168.1.2/24 on the PC or use a DHCP configuration.
- connect the LAN cable in the first right NIC near to the USB port
- switch on the device by connecting it to the power supply
- you can have access to it at the web management wizard using the below URL:
https://192.168.1.1/wizard.php?xml=setup_wizard.xml
- or without wizard:
<https://192.168.1.1/>

Default access data:

- Username: admin
- Password: pfsense

Atlante Informatica S.r.l.



Via Don Giovanni Minzoni, 4 – Moncalieri (TO)

Tel.: +3901119827159 - Fax: +3901119837759

info@atlanteinformatica.com – www.atlanteinformatica.com