


First Appliance Connection

- Set the IP address 192.168.131.2/24 on your PC
- Connect the LAN cable in the LAN NIC, as shown in the figure below:

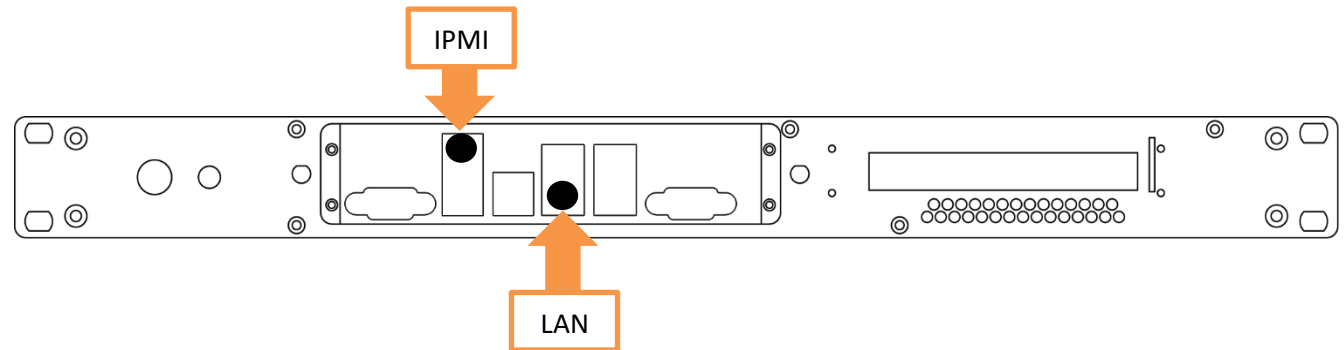

**PROXMOX
A3-SERVER**

- Connect the device with power cable and switch on it.
- You can have access to it at the web management using the below URL:

<https://192.168.131.254:8006>

Default access data:

Username: root

Password: proxmox

- Connect to IPMI Ethernet port: the IPMI ip will be provided by DHCP server on your LAN.


`https://<ip_provided_by_your_DHCP_server>`

Username: ADMIN

Password: ADMIN

Prima connessione all'apparato

- Assegnare al proprio PC l'indirizzo IP 192.168.131.2/24
- Collegarsi tramite cavo di rete alla NIC indicata come LAN nella figura sotto.

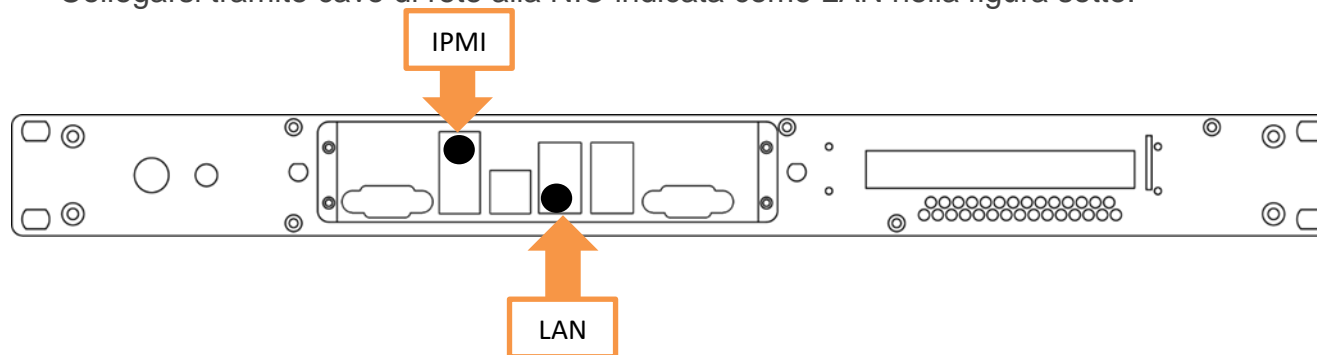

**PROXMOX
A3-SERVER**

- Collegare l'alimentazione al dispositivo ed accenderlo mediante il pulsante di accensione.
- Accedere tramite browser alla seguente pagina per la gestione via web:

<https://192.168.131.254:8006>

Default access data:

Username: root

Password: proxmox

- Collegare un cavo di rete alla porta IPMI: l'ip sarà fornito dal server DHCP se presente sulle rete.

https://<ip_fornito_dal_DHCP_server>

Username: ADMIN

Password: ADMIN